

PPV1

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	


TYPE 1+2 PV SURGE PROTECTOR FOR PCB MOUNTING

PPV1 SERIES




- PCB mounting
- Iimp : 6.25 kA @ 10/350µs
- Application up to 1000 Vdc PV powerline
- Remote Signaling
- EN 61643-31 and IEC 61643-31 compliance


PPV1-6VGS-10-xxx

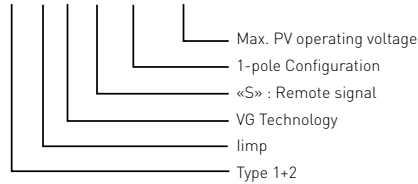


Characteristics

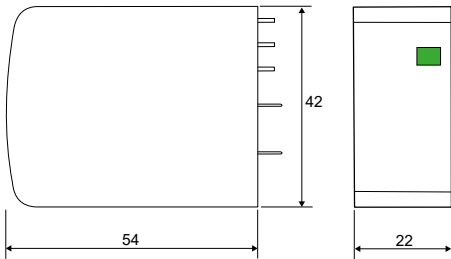

PPV1-6S-10



PPV1-6VGS
PPV1-13VGS



- V : High energy MOV
- GSG: Specific gas tube
- Ft : Thermal fuse
- t° : Thermal disconnection mechanism
- C : Contact for remote signal
- MI : Disconnection indicator

CITEL Model		PPV1-6S-10-600	PPV1-6S-10-750	PPV1-6VGS-600	PPV1-13VGS-10-1200
Description		Type 1+2 PV surge protector			
Max. PV operating voltage	Ucpv	600 Vdc	750 Vdc	600 Vdc	1200 Vdc
Max. PV operating voltage (star mounting)	Ucpv	1200 Vdc	1500 Vdc	1200 Vdc	-
Continuous operating current	Icpv	< 0.1 mA	< 0.1 mA	< 0.1 mA	< 0.1 mA
Nominal discharge current <i>15 x 8/20 µs impulses</i>	In	20 kA	20 kA	20 kA	20 kA
Max. lightning current <i>max. withstand @ 10/350 µs</i>	Iimp	6.25 kA	6.25 kA	6.25 kA	12.5 kA
Protection level	Up	2 kV	2 kV	2 kV	2 kV
Protection level (star mounting)	Up	4 kV	4 kV	4 kV	4 kV
Current withstand short circuit PV	Iscpv	15 000 A	15 000 A	15 000 A	15 000 A
Associated disconnectors					
Thermal disconnector		internal			
External Fuses		without			
Mechanical characteristics					
Dimensions		see diagrams			
Connection to Network		through soldering pins			
Disconnection indicator		1 mechanical indicator			
Remote signaling of disconnection		output on changeover contact			
Mounting		on Printed Circuit Board			
Operating temperature		-40/+85°C			
Protection rating		IP20			
Housing material		Thermoplastic UL94 V-0			
Standards					
Compliance		EN 61643-31 / IEC 61643-31			
Part number					
		8723203	8723205	8723403	8724608

По вопросам продаж и поддержки обращайтесь:

Алматы (7273)495-231	Казань (843)206-01-48	Новокузнецк (3843)20-46-81	Смоленск (4812)29-41-54
Архангельск (8182)63-90-72	Калининград (4012)72-03-81	Новосибирск (383)227-86-73	Сочи (862)225-72-31
Астрахань (8512)99-46-04	Калуга (4842)92-23-67	Омск (3812)21-46-40	Ставрополь (8652)20-65-13
Барнаул (3852)73-04-60	Кемерово (3842)65-04-62	Орел (4862)44-53-42	Сургут (3462)77-98-35
Белгород (4722)40-23-64	Киров (8332)68-02-04	Оренбург (3532)37-68-04	Тверь (4822)63-31-35
Брянск (4832)59-03-52	Краснодар (861)203-40-90	Пенза (8412)22-31-16	Томск (3822)98-41-53
Владивосток (423)249-28-31	Красноярск (391)204-63-61	Пермь (342)205-81-47	Тула (4872)74-02-29
Волгоград (844)278-03-48	Курск (4712)77-13-04	Ростов-на-Дону (863)308-18-15	Тюмень (3452)66-21-18
Вологда (8172)26-41-59	Липецк (4742)52-20-81	Рязань (4912)46-61-64	Ульяновск (8422)24-23-59
Воронеж (473)204-51-73	Магнитогорск (3519)55-03-13	Самара (846)206-03-16	Уфа (347)229-48-12
Екатеринбург (343)384-55-89	Москва (495)268-04-70	Санкт-Петербург (812)309-46-40	Хабаровск (4212)92-98-04
Иваново (4932)77-34-06	Мурманск (8152)59-64-93	Саратов (845)249-38-78	Челябинск (351)202-03-61
Ижевск (3412)26-03-58	Набережные Челны (8552)20-53-41	Севастополь (8692)22-31-93	Череповец (8202)49-02-64
Иркутск (395)279-98-46	Нижний Новгород (831)429-08-12	Симферополь (3652)67-13-56	Ярославль (4852)69-52-93
Россия (495)268-04-70	Киргизия (996)312-96-26-47	Казахстан (7172)727-132	